


March 2009

# CS400 Series Commercial/Industrial Pressure Reducing Regulators



TYPE CS400 PRESSURE REDUCING REGULATOR

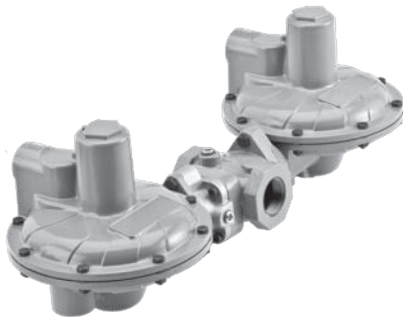

TYPE CS403: CS400 WITH INTEGRAL MONITOR MODULE



TYPE CS404: CS400 WITH VSX4 SLAM-SHUT MODULE

Figure 1. Typical CS400 Pressure Reducing Regulators



## WARNING

Failure to follow these instructions or to properly install and maintain this equipment could result in an explosion and/or fire causing property damage and personal injury or death.

Fisher® regulators must be installed, operated, and maintained in accordance with federal, state, and local codes, rules and regulations, and manufacturer's instructions.

If the regulator vents gas or a leak develops in the system, service to the unit may be required. Failure to correct trouble could result in a hazardous condition.

Call a gas service person to service the unit. Only a qualified person must install or service the regulator.



# CS400 Series

## Introduction

### Scope of the Manual

This manual provides instructions for the installation, maintenance, and parts ordering for CS400 Series service regulators.

### Description

CS400 Series regulators are typically installed on industrial and commercial applications. See Figure 2 for available configurations. Constructions with External Registration, e.g., Type CS400EN, require an external control line.

Optional internal relief is available as well as low capacity token relief. Additional overpressure protection options include the Type CS403 that offers True-Monitor™ Protection, which is provided by an Integral Monitor installed on the inlet side of the valve

body that assumes control of the pressure to the downstream system should the primary regulator cease to regulate downstream flow. The Type CS404 offers a slam-shut module that shuts off the flow of gas to the downstream system in the event of outlet pressure rising above or falling below the predefined levels.

### Specifications

The Specifications section on the following page lists the specifications for the CS400 Series regulators. The following information is stamped on the regulator at the factory: type number, date of manufacture, spring range, orifice size, maximum inlet pressure, maximum operating outlet pressure, and outlet pressure which may damage regulator parts.

TYPE NUMBER				OPTIONS	
C	S	4	0		
					<b>OVERPRESSURE PROTECTION MODULE</b>
			0		Without Overpressure Protection Module
			3		With Integral Monitor Module <sup>(1,3)</sup>
			4		With Slam-shut Module <sup>(3)</sup>
					<b>PRESSURE REGISTRATION</b>
				E	External Registration
				I	Internal Registration
					<b>RELIEF</b>
				N	Non-Relief
				T	Token Internal Relief
				R	Internal Relief
Example: Type number CS404IT: CS400 regulator constructed with Type VSX4 Slam-shut module, with Internal pressure registration, and with Token relief.					
1. Reference Instruction Manual D103126X012 for information regarding the Integral Monitor module.					
2. Reference Instruction Manual D103127X012 for information regarding the Type VSX4 safety shutoff module.					
3. Available only with Non-Relieving or Token Relief options, not Internal Relief.					

Figure 2. Available Configurations

## Specifications

### Available Configurations

See Figure 2

### Body Sizes, End Connection Styles, and Pressure Rating<sup>(1)</sup>

See Table 2

### Maximum Inlet Pressures<sup>(1)</sup>

**Emergency:** 175 psig / 12,1 bar

**Operating:** See Table 1

### Operating Pressure Ranges<sup>(1)</sup>

**Regulator:** See Table 3

**Integral Monitor Module:** See Table 4

**Slam-shut Module:** See Tables 5 and 6

### Maximum Outlet Pressures<sup>(1)</sup>

**Emergency (Casing):** 25 psig / 1,7 bar

**To Avoid Internal Parts Damage:**

5 psig / 0,34 bar over set pressure

**Operating:** 5.5 psig / 0,38 bar

### Flow Coefficients and Orifice Sizes

See Table 1

### IEC Sizing Coefficients

See Table 1

### Spring Case Vent Connection

1 NPT

### Temperature Capabilities<sup>(1,2)</sup>

-20° to 150°F / -29° to 66°C

### Pressure Registration

Internal or External

### Approximate Weights

#### With Threaded Body

Type CS400: 9 pounds / 4 kg

Type CS403: 18.5 pounds / 8 kg

Type CS404: 11.2 pounds / 5 kg

#### With Flanged Body

Add 8.6 pounds / 4 kg to weights listed

1. The pressure/temperature limits in this Instruction Manual and any applicable standard or code limitation should not be exceeded.
2. Product has passed Fisher® testing for lockup, relief start-to-discharge and reseal down to -40 degrees.

**Table 1. Inlet Pressure Ratings and Flow and Sizing Coefficients**

TYPES	ORIFICE SIZE		MAXIMUM OPERATING INLET PRESSURE		FLOW COEFFICIENTS (WIDE-OPEN)		C <sub>1</sub>	IEC SIZING COEFFICIENTS		
	Inches	mm	Psig	bar	C <sub>g</sub>	C <sub>v</sub>		X <sub>T</sub>	F <sub>D</sub>	F <sub>L</sub>
CS400, CS403, CS404	3/16	4,8	125	8,6	27	0,97	27,7	0,50	0,91	0,89
	1/4	6,4	125	8,6	50	1,77	28,2	0,50	0,92	
	5/16	7,9	100	6,9	82	2,90	28,3	0,50	0,94	
	3/8	9,5	60	4,1	113	3,72	30,4	0,58	0,89	
	1/2	13	40	2,8	182	5,61	32,4	0,66	0,82	
	5/8	16	30	2,1	284	7,26	39,1	0,97	0,74	
	3/4	19	20	1,4	356	9,83	36,2	0,83	0,72	

**Table 2. Body Sizes, Material, End Connections, and Pressure Ratings**

BODY MATERIAL	INLET SIZE, NPS	OUTLET SIZE, NPS	END CONNECTION	FACE-TO-FACE DIMENSION		BODY PRESSURE RATING	
				Inches	mm	Psig	bar
Gray Cast Iron	1-1/4	1-1/4	NPT	4.5	114	175	12,1
	1-1/2	1-1/2		5	127		
	2	2		10	254		
	2	2	CL125 FF	10	254		
Ductile Cast Iron	1-1/4	1-1/4	NPT	4.5	114	290	20,0
	1-1/2	1-1/2		4.5	114		
	2	2		5	127		
	1-1/4	1-1/4	ISO 7/1 Rp	4.5	114		
	1-1/2	1-1/2		4.5	114		
	2	2		5	127		
	DN 50 / NPS 2	DN 50 / NPS 2	CL125 FF / CL150 FF	10	254		
			PN 10/16	10	254	232	16,0
Steel	1-1/4	1-1/4	NPT	4.5	114	290	20,0
	1-1/2	1-1/2		4.5	114		
	1-1/4	1-1/4	ISO 7/1 Rp	4.5	114		
	1-1/2	1-1/2		4.5	114		

# CS400 Series

**Table 3. Outlet Pressure Ranges**

TYPES	OUTLET PRESSURE RANGE	PART NUMBER	SPRING COLOR	SPRING WIRE DIAMETER		SPRING FREE LENGTH	
				Inches	mm	Inches	mm
CS400, CS403, CS404	3.5 to 5-inches w.c. / 9 to 13 mbar	GE30198X012	Red	0.098	2,49	4.18	106
	4.5 to 6.5-inches w.c. / 11 to 16 mbar	GE30195X012	Purple	0.080	2,03	4.32	110
	6 to 8-inches w.c. / 15 to 20 mbar	GE30188X012	Gold	0.108	2,74	4.18	106
	7.5 to 11-inches w.c. / 19 to 28 mbar	GE30189X012	Blue	0.110	2,79	4.40	112
	10 to 14-inches w.c. / 25 to 35 mbar	GE30224X012	Unpainted	0.110	2,79	4.40	112
	12 to 19-inches w.c. / 30 to 48 mbar	GE30196X012	Green	0.112	2,85	4.70	119
	18-inches w.c. to 1 psig / 45 to 69 mbar	GE30225X012	Orange	0.120	3,05	4.94	125
	1 to 2 psig / 69 to 138 mbar	GE30190X012	Black	0.140	3,56	4.66	118
	2 to 5.5 psig / 138 to 380 mbar	GE30197X012	Yellow	0.172	4,37	4.42	112

**Table 4. Type CS403 Regulator and Integral Monitor Outlet Pressure Ranges**

PRIMARY REGULATOR					INTEGRAL MONITOR					
Type	Nominal		Spring Part Number	Spring Color	Setpoint <sup>(1)</sup>		Spring Part Number	Spring Range, Inches w.c. / mbar	Spring Color	
	Inches w.c.	mbar			Inches w.c.	mbar				
CS403	4	10	GE30198X012	Red	14	35	GE30189X012	11 to 16 / 27 to 40	Blue	
	5	12	GE30195X012	Purple						
	7	17	GE30188X012	Gold						
		11	27	GE30189X012	Blue	21	52	GE30196X012	16 to 23 / 40 to 57	Green
		14	35	GE30224X012	Unpainted					
		18	45	GE30196X012	Green	1 psig	69	GE30225X012	23 to 28 / 56 to 69	Orange
		1 psig	69	GE30225X012	Orange	1.5 psig	103	GE30190X012	1 to 2 psig / 69 to 138	Black
		2 psig	138	GE30190X012	Black	2.5 psig	172	GE35081X012	1.5 to 2.5 psig / 103 to 172	Purple Stripe
		3 psig	207	GE30197X012	Yellow	3.5 psig	241	GE30192X012	2.5 to 4 psig / 172 to 276	Dark Blue
		4 psig	276	GE30197X012		5 psig	345	GE33121X012	4 to 7.5 psig / 276 to 517	Red
	5 psig	345	GE30197X012	6 psig		414				
	5 psig	345	GE30197X012							


1. Integral Monitor setpoints shown represent the minimum setpoint difference between the Integral Monitor and the Primary regulator. Higher monitor setpoints can be chosen, e.g., for a Primary regulator setpoint of 7-inches w.c. / 17 mbar, the Integral Monitor can also be set at 14-, 21-inches w.c. / 35, 52 mbar, 1 psig / 0,07 bar or higher.

**Table 5. Type CS404 Regulator and Slam-Shut OPSO Pressure Ranges**

REGULATOR			SLAM-SHUT DEVICE		
Type	Nominal Setpoint, Inches w.c. / mbar	Spring Range, Inches w.c. / mbar	Overpressure Shutoff (OPSO)		
			Setpoint, Inches w.c. / mbar	Spring Range, Inches w.c. / mbar	Spring Part Number
CS404	4 / 10	3.5 to 5 / 9 to 13	12 / 30	10 to 14 / 25 to 35	GF02167X012
	5 / 13	4.5 to 6.5 / 11 to 16	17 / 43	12 to 25 / 30 to 62	GF02168X012
	7 / 17	6 to 8 / 15 to 20	17 / 43		
	11 / 27	7.5 to 11 / 19 to 28	19 / 48		
	14 / 35	10 to 14 / 25 to 35	30 / 75	30 to 44 / 75 to 110	GF02169X012
	0.65 / 45	0.45 to 0.7 psig / 30 to 48	1.3 psig / 90		
	0.72 / 50	0.65 to 1 psig / 45 to 69	1.5 psig / 100		
	1 psig / 69	1 to 2 psig / 69 to 138	1.9 psig / 130	1.7 to 3 psig / 120 to 210	GF02170X012
	1.5 psig / 103		2.3 psig / 160		
	2 psig / 138		3.3 psig / 230		
	3 psig / 207	2 to 5.5 psig / 138 to 380	5.1 psig / 350	4.8 to 7 psig / 330 to 480	GF02172X012
	4 psig / 276		5.8 psig / 400		
	5 psig / 345		6.7 psig / 460		
5.5 psig / 380	8.1 psig / 560		8 to 19 psig / 510 to 1300		

**Table 6. Type CS404 Regulator and Slam-shut OPSO and UPSO Pressure Ranges**

REGULATOR			SLAM-SHUT DEVICE					
Type	Nominal Setpoint, Inches w.c. / mbar	Spring Range, Inches w.c. / mbar	Overpressure Shutoff (OPSO)			Underpressure Shutoff (UPSO)		
			Nominal Set, Inches w.c. / mbar	Range, Inches w.c. / mbar	Spring Part Number	Nominal Set, Inches w.c. / mbar	Range, Inches w.c. / mbar	Spring Part Number
CS404	14 / 35	10 to 14 / 25 to 35	28 / 70	0.73 to 1.8 psig / 50 to 129	GF02168X012	8.8 / 22	4 to 30 / 10 to 75	T14169T0012
	0.65 psig / 45	0.45 to 0.7 psig / 30 to 48	1.3 psig / 90			0.4 psig / 30		
	0.72 psig / 50	0.65 to 1 psig / 45 to 69	1.6 psig / 110	0.4 psig / 30				
	1 psig / 69		1.9 psig / 130		0.58 psig / 40			
	1.5 psig / 103	1 to 2 psig / 69 to 138	2.3 psig / 160	GF02170X012	0.73 psig / 50	0.36 to 2.3 psig / 25 to 159	T14170T0012	
	2 psig / 138		3.2 psig / 220		1 psig / 69			
	3 psig / 207	2 to 5.5 psig / 138 to 380	5.2 psig / 360	GF02171X012	2 psig / 140			
	4 psig / 276		5.8 psig / 400		2 psig / 140	1.45 to 7.3 psig / 100 to 500	FA142869X12	
	5 psig / 345		7.5 psig / 520		2.9 psig / 200			
	5.5 psig / 380		8.1 psig / 560		3.6 psig / 250			

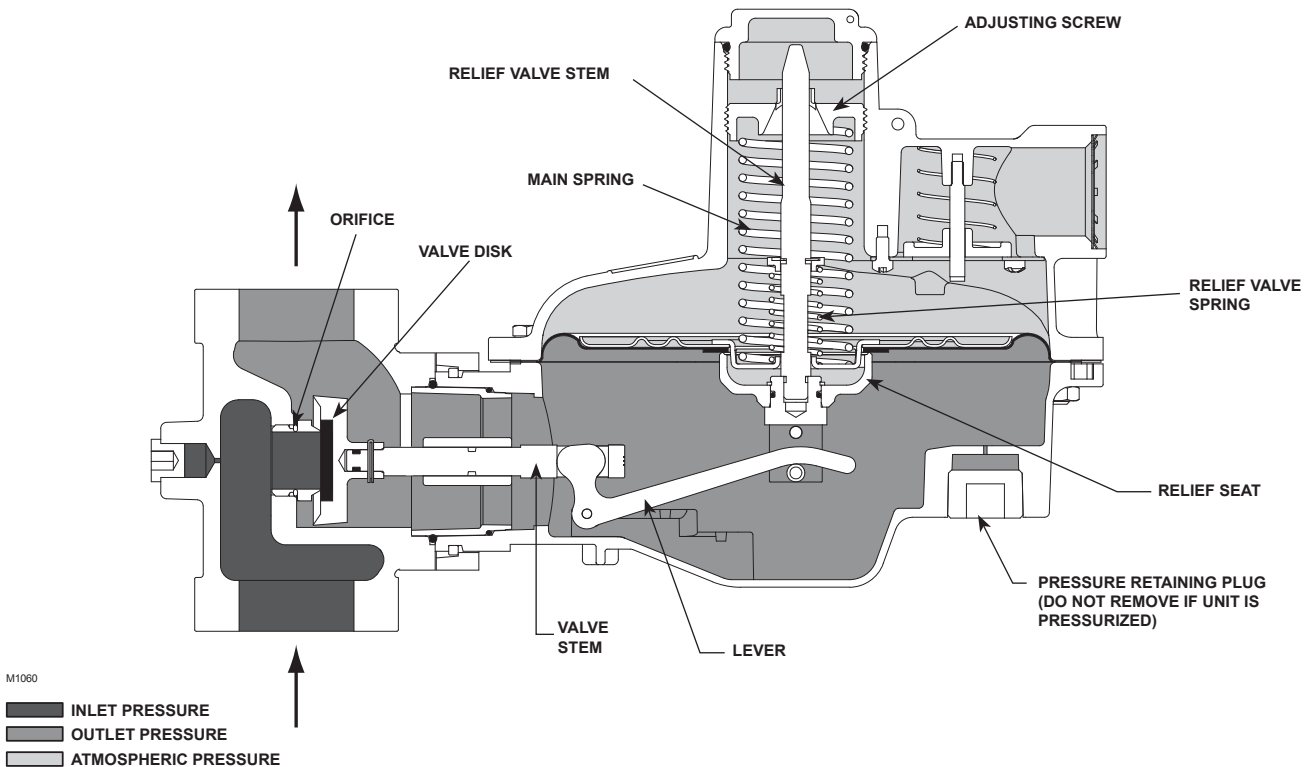

**Figure 3. Type CS400IR Internally Registered Regulator Operational Schematic**

# CS400 Series

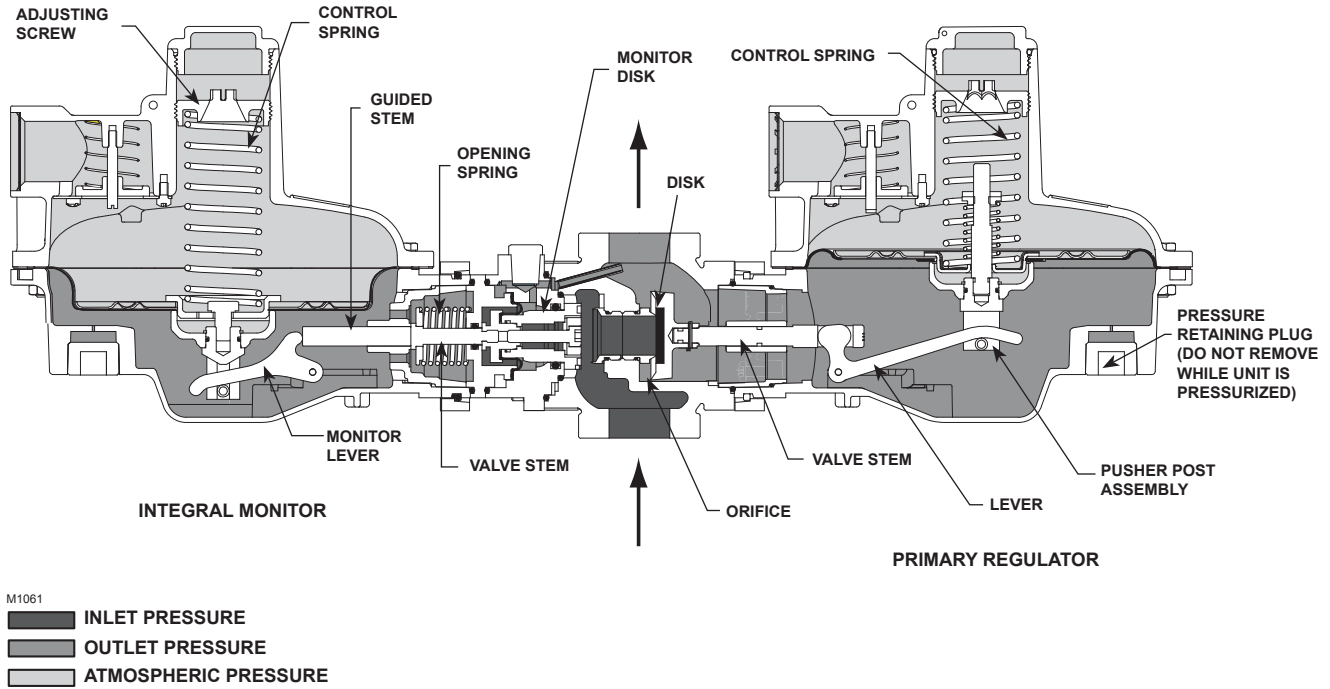


Figure 4. Type CS403IT Internally Registered Regulator with Integral Monitor Operational Schematic

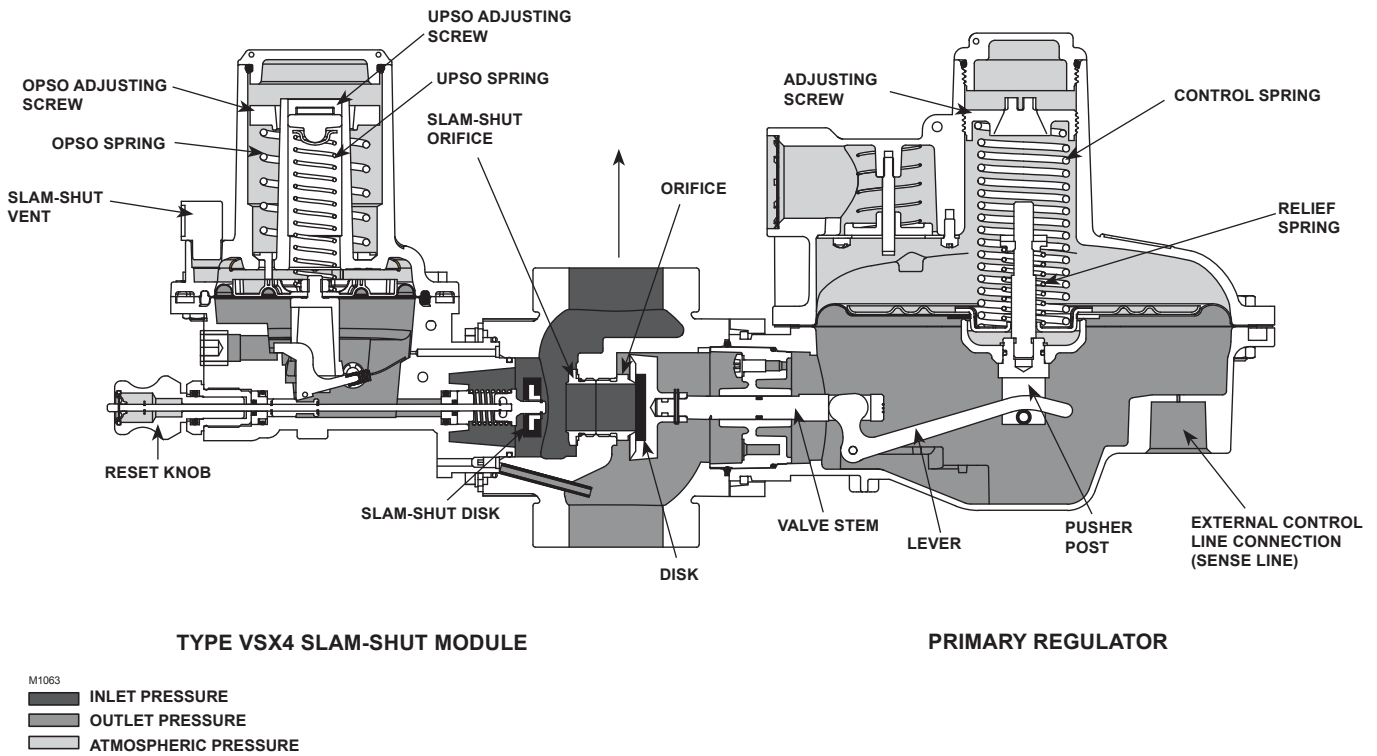


Figure 5. Type CS404ET Externally Registered Regulator with Slam-shut Operational Schematic

## Principle of Operation

### Type CS400 Base Regulator Operation

Refer to Figure 3. When downstream demand decreases, the pressure under the diaphragm increases. This pressure overcomes the regulator setting (which is set by the regulator control spring). Through the action of the pusher post assembly, lever, and valve stem, the valve disk moves closer to the orifice and reduces gas flow. If demand downstream increases, pressure under the diaphragm decreases. Spring force pushes the pusher post assembly downward, the valve disk moves away from the orifice, and the gas flow increases downstream as the regulator opens in response to the decreased pressure underneath the diaphragm.

The Type CS400IR regulator includes an internal relief valve for overpressure protection. If the downstream pressure exceeds the regulator setting by 7 to 28-inches w.c. / 17 to 70 mbar (depending on the main spring used), the relief valve opens and excess gas is vented through the flapper vent in the upper spring case.

The Types CS400IT and CS400ET provide a low capacity/token relief. Token relief provides relief from minor overpressure caused by nicks or dents on the orifice or by thermal expansion of gas in the downstream line. Token relief also provides a token or signal, in the form of odor, that an overpressure situation is occurring.

### Type CS403 Integral Monitor Operation

Type CS403 combines the operation of a conventional two-regulator wide-open monitor set into one body, see Figure 4. The Integral True-Monitor is installed on the inlet side of the body and serves to throttle flow and maintain an acceptable downstream pressure in the case where the Primary regulator fails to regulate downstream pressure. During normal operation the Integral Monitor is in a wide-open state as it's setpoint is set higher than the primary regulator.

See Table 4 for guidance regarding the setpoints of the regulator and associated integral monitor sets. If the downstream pressure should rise to the setpoint of the internal monitor due to loss of pressure control by the primary regulator, the integral monitor will assume control and regulator the flow to the downstream system. See the Type TM600 Instruction Manual for additional details of operation.

If an Token relief is present, the token relief will relieve a small amount of gas to the atmosphere as an indication that the Integral monitor is controlling the downstream pressure.

### Type CS404 Slam-Shut Operation

The Type VSX4 slam-shut module on the Type CS404 regulator is a fast acting shutoff device that provides overpressure (OPSO) or over and underpressure (OPSO / UPSO) protection by completely shutting off the flow of gas to the downstream system. See Tables 5 and 6 for guidance regarding the typical setpoints of the regulator and associated OPSO and UPSO sets. The Type VSX4's actions are independent of the Type CS404 regulator and of variations to the inlet pressure. The Type VSX4 provides the option of internal or external downstream pressure registration. External registration requires a downstream sensing line. See Figure 8 for guidance regarding installation of the downstream control line.

The Type VSX4 shutoff disk is normally in the open (reset) position, see Figure 5. If the downstream pressure below the slam-shut diaphragm increases (or decreases) until it reaches the slam-shut setpoint, this diaphragm moves upward (or downward) to release the trip mechanism which allows the spring force on the stem to push the disk against the seat, shutting off all gas flow. To reset the slam-shut after gas has been shutoff, reference the the Type VSX4 Instruction Manual for additional details.

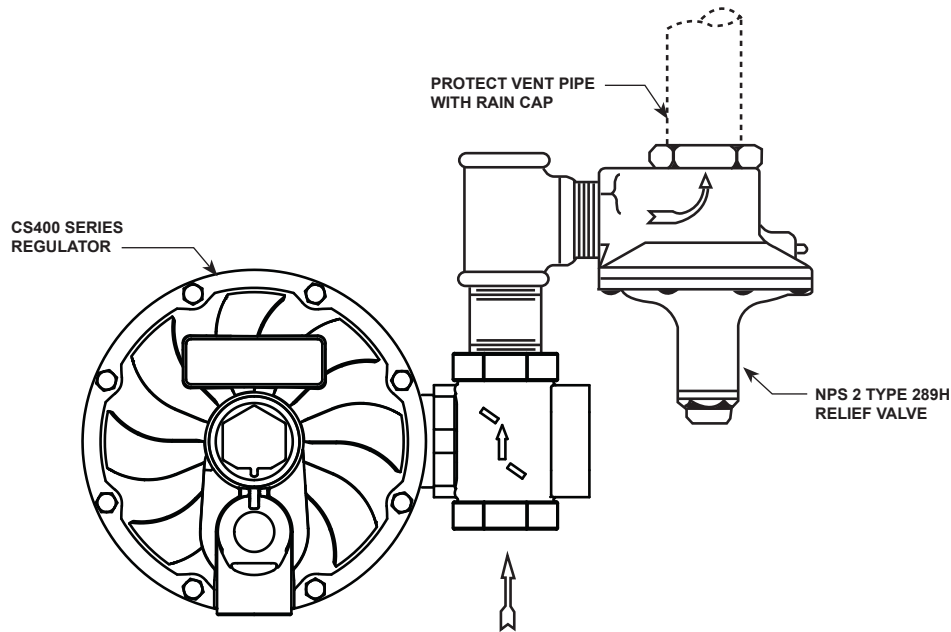


Figure 6. CS400 Series Regulator Installed with the Vent Pointed Downward and with a Type 289H Relief Valve for High Capacity Relief

## Installation and Overpressure Protection



### WARNING

Personal injury or system damage may result if this regulator is installed, without appropriate overpressure protection, where service conditions could exceed the limits given in the Specifications section and/or regulator nameplate.

Regulator installations should be adequately protected from physical damage.

All vents should be kept open to permit free flow of gas to the atmosphere. Protect openings against entrance of rain, snow, insects, or any other foreign material that may plug the vent or vent line. On outdoor installations, point the spring case vent downward to allow condensate to drain (see Figures 6 through 8).

This minimizes the possibility of freezing and of water or other foreign materials entering the vent and interfering with proper operation.

For the Type CS403 with the Integral Monitor or the Type CS404 with Slam-shut, point the vents of both the Primary Regulator and Integral Monitor or Slam-shut downward to allow condensate to drain. From the factory, the Integral Monitor or Slam-shut will always point in the same direction as that of the Primary Regulator.

Under enclosed conditions or indoors, escaping gas may accumulate and be an explosion hazard. In these cases, the vent should be piped away from the regulator to the outdoors.



## CAUTION

The CS400 Series regulators have an outlet pressure rating lower than their inlet pressure rating. If actual inlet pressure can exceed the outlet pressure rating, outlet overpressure protection is necessary. However, overpressuring any portion of the regulators beyond the limits in Specifications section may cause leakage, damage to regulator parts, or personal injury due to bursting of pressure-containing parts.

Some type of external overpressure protection should be provided to the CS400 Series if inlet pressure will be high enough to damage downstream equipment. Common methods of external overpressure protection include relief valves, monitoring regulators, shutoff devices, and series regulation.

If the regulator is exposed to an overpressure condition, it should be inspected for any damage that may have occurred. Regulator operation below these limits does not preclude the possibility of damage from external sources or from debris in the pipeline.

## General Installation Instructions

Before installing the regulator,

- Check for damage, which might have occurred during shipment.
- Check for and remove any dirt or foreign material, which may have accumulated in the regulator body.

- Blow out any debris, dirt or copper sulfate in the copper tubing and the pipeline.
- Apply pipe compound to the male threads of the pipe before installing the regulator.
- Make sure gas flow through the regulator is in the same direction as the arrow on the body. “Inlet” and “Outlet” connections are clearly marked.


## Installation Location

- The installed regulator should be adequately protected from vehicular traffic and damage from other external sources.
- **Install the regulator with the vent pointed vertically down, see Figures 6 through 8.** If the vent cannot be installed in a vertically down position, the regulator must be installed under a separate protective cover. Installing the regulator with the vent down allows condensation to drain, minimizes the entry of water or other debris from entering the vent, and minimizes vent blockage from freezing precipitation.
- **Do not install the Types CS400, CS403, or CS404 in a location where there can be excessive water accumulation or ice formation,** such as directly beneath a downspout, gutter, or roof line of building. Even a protective hood may not provide adequate protection in these instances.
- Install the Regulator so that any gas discharge through the vent or vent assembly is over 3 feet / 0,91 meters away from any building opening.


## Regulators Subjected to Heavy Snow Conditions

Some installations, such as in areas with heavy snowfall, may require a hood or enclosure to protect the regulator from snow load and vent freeze over.

# CS400 Series

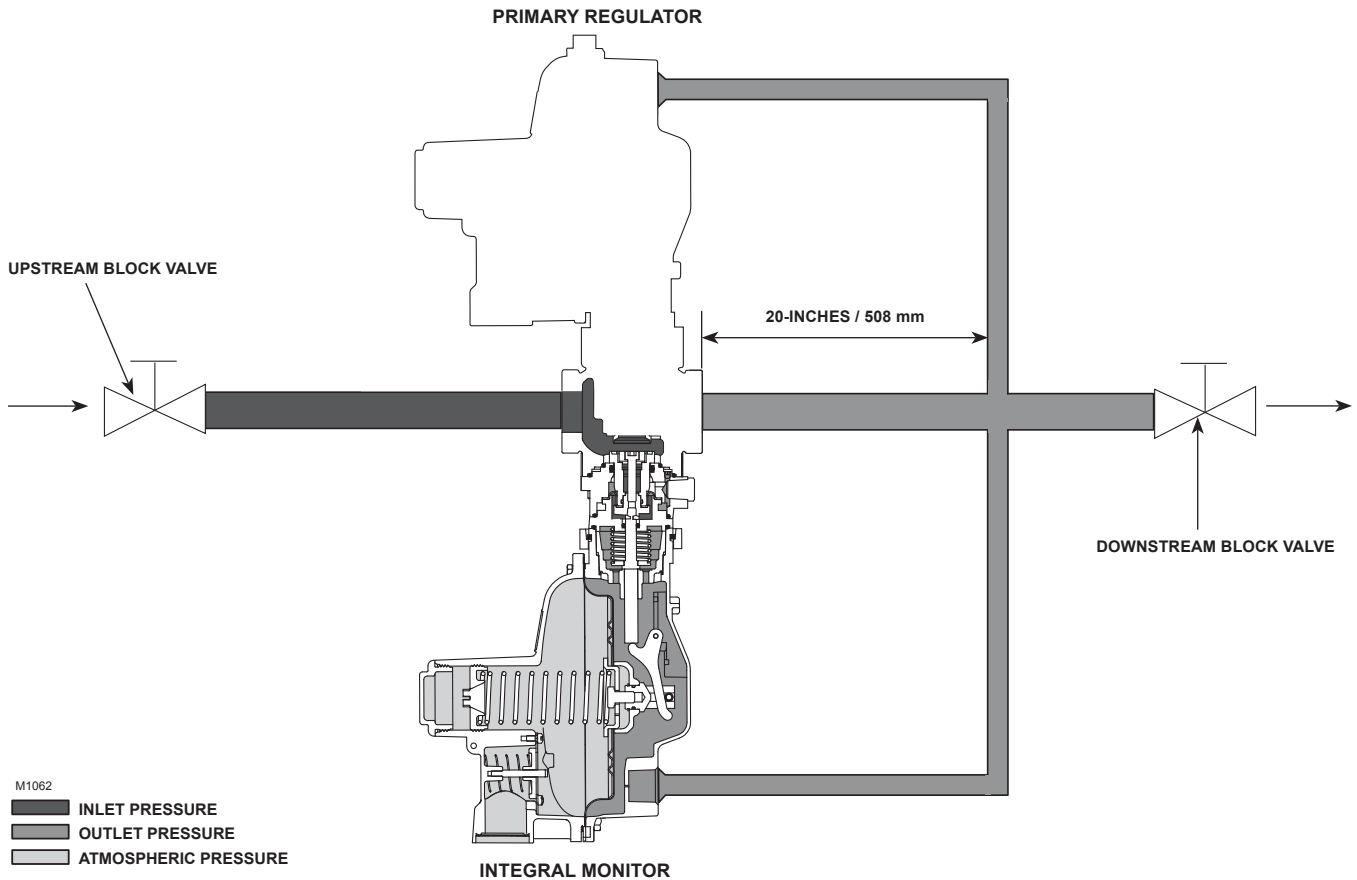

*Figure 7. Type CS403 Downstream Control Line Connection*

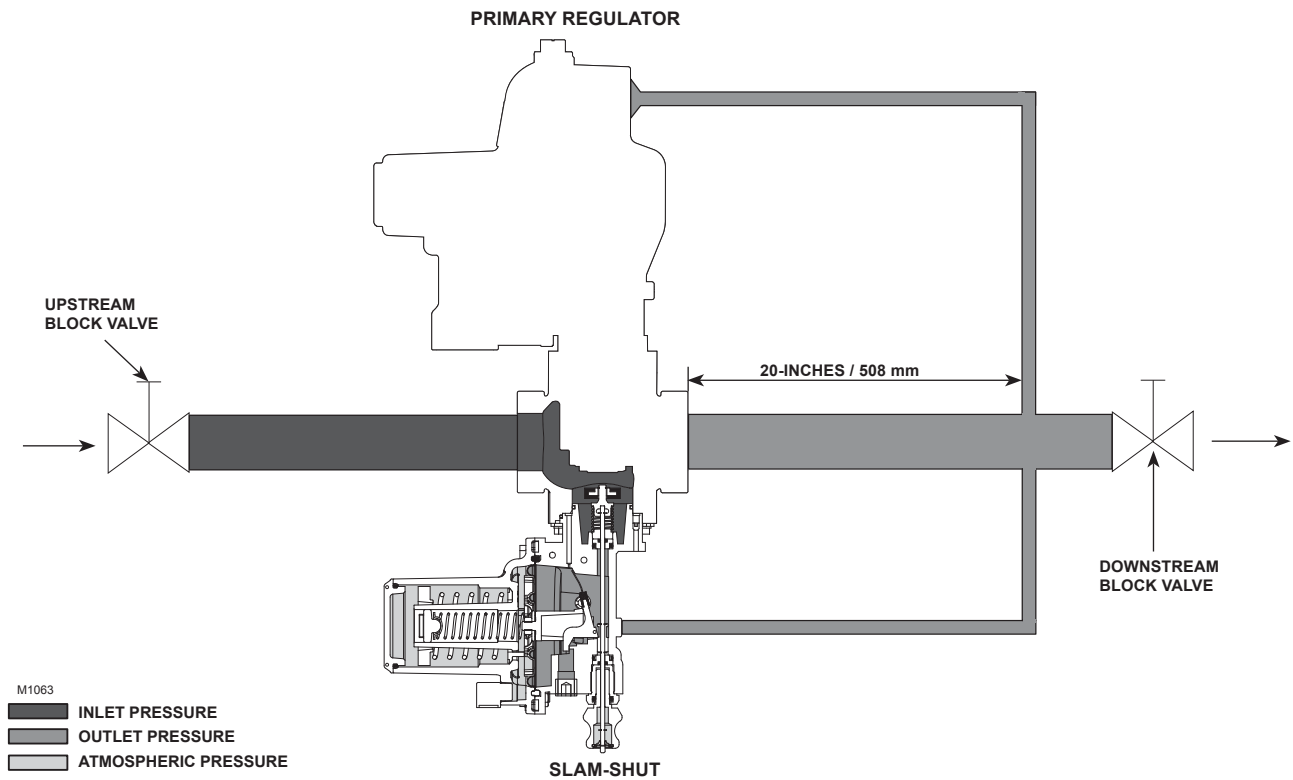

*Figure 8. Type CS404 Downstream Control Line Connection*

## Downstream Control Line Installation

A CS400 Series regulator with an EN or ET in the type number has a blocked throat, an O-ring stem seal, and a 3/4 NPT control line tapping in the lower diaphragm casing. A regulator with a downstream control line is used for monitoring installations or other applications where there is other equipment installed between the regulator and the pressure control point.

For Types CS400ET and CS400EN regulators, connect downstream control line tubing to the lower casing, and run the tubing approximately 20-inches / 508 mm downstream. For best results, the outer diameter of the control line tubing should be 3/8-inch / 9,5 mm or larger.

### *Downstream Control Line Installation with Integral Monitor*

Refer to Figure 7. When installing the Types CS403ET and CS403EN regulators, connect downstream control line tubing to the lower casing of the Primary Regulator, and run the tubing approximately 20-inches / 508 mm downstream. Connect a second, separate downstream control line tubing to the lower casing of the Integral Monitor, and run the tubing approximately 20-inches / 508 mm downstream. For best results, the outer diameter of the control line tubing for both the Primary Regulator and the Integral Monitor should be 3/8-inch / 9,5 mm or larger.

### *Downstream Control Line Installation with Slam-shut*

Refer to Figure 8. When installing the Types CS404ET and CS404EN regulators, connect downstream control line tubing to the lower casing of the Regulator, and run the tubing approximately 20-inches / 508 mm downstream. Connect a second, separate downstream control line tubing to the lower casing of the Slam-shut, and run the tubing approximately 20-inches / 508 mm downstream. For best results, the outer diameter of the control line tubing for the Regulator should be 3/8-inch / 9,5 mm or larger. The outer diameter of the control line tubing for the slam-shut should be 1/4-inch / 6,4 mm or larger.

### *Installation with External Overpressure Protection*

If the regulator is used in conjunction with a Type 289H relief valve, it should be installed as shown in Figure 6. The outside end of the vent line should be protected with a rainproof assembly. The Type 289H should be set

10-inches w.c. / 25 mbar higher than the outlet pressure setting of the regulator, up to 30-inches w.c. / 75 mbar reduced pressure. For pressure greater than this, set the Type 289H 0.75 psi / 0,05 bar higher than the outlet pressure setting of the regulator.

### *Vent Line Installation*

The CS400 Series regulators have a 1 NPT screened vent opening in the spring case. If necessary to vent escaping gas away from the regulator, install a remote vent line in the spring case tapping. Vent piping should be as short and direct as possible with a minimum number of bends and elbows. The remote vent line should have the largest practical diameter. Vent piping on regulators with internal relief must be large enough to vent all relief valve discharge to atmosphere without excessive backpressure and resulting excessive pressure in the regulator.

The Type CS403 offers an optional token relief. This optional low capacity relief is located in the spring case of the Primary Regulator. If necessary to vent escaping gas away, install a remote vent line in the spring case tapping of the Primary Regulator as described above.

Periodically check all vent openings to be sure that they are not plugged.

CS400 Series Outlet pressure ranges are shown in Table 3. Outlet pressure greater than 5 psi / 0,34 bar above setpoint may damage internal parts such as the diaphragm head and valve disk. **The maximum emergency (casing) outlet pressure is 25 psig / 1,7 bar.**

## Startup



**Pressure gauges should always be used to monitor downstream pressure during Startup.**

With the downstream system depressurized, use the following procedure to startup the regulator.

1. Check to see that all appliances are turned off.
2. Slowly open the upstream shutoff valve.
3. Check inlet and outlet pressure for correct values.
4. Check all connections for leaks.
5. Light the appliance pilots.

## Adjustment

### Note

**For Types that include the Integral Monitor module, refer to the instruction manual for Type TM600 Integral Monitor for Adjustment and Maintenance of the Integral Monitor. For Types that include the Slam-shut module, refer to the instruction manual for Type VSX4 Slam-shut for Adjustment and Maintenance of the Slam-shut.**

**The range of allowable pressure settings is stamped on the nameplate. If the required setting is not within this range, substitute the correct spring (as shown in Table 3). If the spring is changed, change the nameplate to indicate the new pressure range.**

A pressure gauge should always be used to monitor downstream pressure while adjustments are being made.

1. Remove the closing cap (key 60, Figure 9).
2. To increase the outlet setting, turn the adjusting screw (key 65, Figure 9) clockwise. To decrease the outlet setting, turn the adjusting screw counterclockwise.
3. Replace the closing cap.

## CS400 Series with Integral Monitor Module

When adjusting the Primary Regulator and Integral Monitor for operation, ensure that the pressure differences between the Primary Regulator and shown in Table 4 are observed. For example, if the Primary Regulator setpoint is set at 7-inches w.c. / 17 mbar, then the Integral Monitor should be set at a minimum of 14-inches w.c. / 35 mbar or higher.

To test the Integral Monitor operation, the Primary regulator setpoint must be adjusted above the Integral Monitor's setpoint to simulate a failure of the primary regulator. If the spring range of the Primary Regulator is sufficiently high, it can simply be adjusted above the Integral Monitor's setpoint by following step 2 above. Otherwise, a different spring with a setpoint higher than the Integral Monitor's setpoint must be installed to check the operation of the Integral Monitor.

## CS400 Series with Slam-Shut Module

When adjusting the Primary Regulator and Slam-shut for operation, reference Tables 5 and 6 for the OPSO and UPSO setpoints of the slam-shut for the given regulator spring ranges.

## Shutdown

Installation arrangements may vary, but in any installation it is important that the valves be opened or closed slowly and that the outlet pressure be vented before venting inlet pressure to prevent damage caused by reverse pressurization of the regulator. The steps below apply to the typical installation as indicated.

1. Open valves downstream of the regulator.
2. Slowly close the upstream shutoff valve.
3. Inlet pressure will automatically be released downstream as the regulator opens in response to the lowered pressure on the diaphragm.

## Maintenance and Inspection



### WARNING

**To avoid personal injury or equipment damage, do not attempt any maintenance or disassembly without first isolating the regulator from system pressure and relieving all internal pressure as described in "Shutdown".**

**Regulators that have been disassembled for repair must be tested for proper operation before being returned to service. Only parts manufactured by Fisher® should be used for repairing Fisher regulators. Relight pilot lights according to normal startup procedures.**

**Due to normal wear or damage that may occur from external sources, this regulator should be inspected and maintained periodically. The frequency of inspection and replacement of parts depends upon the severity of service conditions or the requirement of local, state, and federal rules and regulations.**

Periodic inspection must be performed on the Types CS403 and CS404 to ensure that the Integral Monitor or Slam-shut overpressure protection modules, respectively, protect the downstream system in the event of a failure to the Primary regulator. This inspection must test that the Integral Monitor or Slam-shut functions as intended. The frequency of this inspection must be at intervals not exceeding 15 months, but at least once each calendar year.

## Disassembly to Replace Diaphragm

1. Remove the closing cap (key 60, Figure 9). Turn the adjusting screw (key 65) counterclockwise to ease spring compression.
2. Remove the adjusting screw (key 65) and control spring (key 38).
3. Remove hex nuts (key 16) and cap screws (key 15). Separate the upper spring case (key 1) from the lower casing assembly (key 9).

### Note

**If disassembling a CS400 Series regulator, lift the upper spring case straight up in order to avoid hitting the stem (key 44).**

4. Slide the diaphragm head assembly (key 55) away from the body (key 70) to unhook the pusher post (key 50) from the lever (key 10). Lift off the diaphragm head assembly (key 55).
5. **For none relieving units such as the Types CS400IN and CS400EN**, unscrew the screw retainer (key 45, Figure 10) using a 5/8-inch / 16 mm wrench. The screw retainer fastens the lower spring seat (key 43) to the pusher post (key 50). Unscrewing the screw retainer will separate the lower spring seat (key 43), diaphragm head assembly (key 55), and pusher post (key 50). **For units with internal relief such as Type CS400IR**, press down on the upper spring retainer (key 42, Figure 10) using a 9/16-inch / 14 mm box-end wrench and remove the E-ring (key 58). Slide the upper spring retainer (key 42), the relief spring (key 41), the lower spring seat (key 43) and the diaphragm assembly (key 55) off of the relief valve stem (key 44).
6. Reassemble in reverse order of the above steps.

## Disassembly to Replace Valve Disk and Orifice

1. Remove the cap screws (key 71, Figure 9) which hold the lower spring casing (key 9) to the body (key 70). Separate the lower casing (key 9) from the body.
2. Check the body O-ring (key 21) for wear and replace as necessary.
3. Examine the valve disk (key 36) for nicks, cuts, and other damage. Remove the disk clip (key 37) that holds the disk to the stem (key 11) and replace the disk if necessary.
4. Examine the seating edge of the orifice (key 25). If it is nicked or rough, remove the orifice (key 25) from the body (key 70) using a 1-1/16-inch / 27 mm socket wrench. Coat the threads of the replacement orifice with a good quality lubricant and install.  
  
Change to a new part when reassembling the regulator. Coat the threads of the replacement orifice with a good quality lubricant. (If the orifice is being replaced with a different sized port, update the nameplate to state the new size and maximum inlet pressure).
5. Reassemble the regulator in reverse order of the above steps.

## Regulator Reassembly

As indicated by the square callouts in Figures 9 through 13, it is recommended that a good quality pipe thread sealant be applied to pressure connections and fittings and a good quality lubricant be applied to O-rings. Also apply an anti-seize compound to the adjusting screw threads and other areas as needed.

## Parts Ordering

The type number, orifice size, spring range, and date of manufacture are stamped on the nameplate. Always provide this information in any correspondence with your local Sales Office regarding replacement parts or technical assistance.

When ordering replacement parts, reference the key number of each needed part as found in the following parts list. Separate kit containing all recommended spare parts is available.

# CS400 Series

## Parts List

Key	Description	Part Number	Key	Description	Part Number
	Spare Parts (Repair Parts Kit include keys 21, 27, 36, 55, and 62)		27*	O-ring, Nitrile (NBR)	10A3802X022
	Type CS400	RCS400X0012	28*	O-ring, Nitrile (NBR)	GE01439X012
	Type CS403	RCS403X0012	36*	Valve Disk, Aluminum/Nitrile (NBR)	GE26497X012
	Type CS404	RCS404X0012	37	Disk Clip, 302 Stainless steel	GE33771X012
1	Spring Case, Aluminum	GE24555X012	38	Control Spring, 302 Stainless steel	
2	Vent Screen, 18-8 Stainless steel	T1121338982		3.5 to 5-inches w.c. / 9 to 13 mbar, Red	GE30198X012
3	Retaining Ring, Zinc-plated steel	T1120925072		4.5 to 6.5-inches w.c. / 11 to 16 mbar, Purple	GE30195X012
4	Flapper Guide, 304 Stainless steel	GE27061X012		6 to 8-inches w.c. / 15 to 20 mbar, Gold	GE30188X012
5	Flapper	GE27063X012		7.5 to 11-inches w.c. / 19 to 28 mbar, Blue	GE30189X012
6	Flapper Spring	GE35010X012		10 to 14-inches w.c. / 25 to 35 mbar, Unpainted	GE30224X012
7	Flapper Retaining Ring, Stainless steel	GE27024X012		12 to 19-inches w.c. / 30 to 48 mbar, Green	GE30196X012
8	Flapper Screw (3 required)	GE29724X012		18 to 28-inches w.c. / 45 to 70 mbar, Orange	GE30225X012
9	Lower Casing, Aluminum	GE24289X012		1 to 2 psig / 69 to 138 mbar, Black	GE30190X012
10	Lever, Steel	GE27194X012		2 to 5.5 psig / 138 to 380 mbar, Yellow	GE30197X012
11	Stem, Aluminum	GE27402X012	41	R.V. Spring, 302 Stainless steel	GE30194X012
12*	O-ring, External Registration, Nitrile (NBR)	1E472706992	42	Spring Retainer, Aluminum	GE27296X012
13	Lever Pin, 18-8 Stainless steel	T14397T0012	43	Spring Seat, Steel	
14	Lever Screw (2 required)	GE34243X012		Non-Relief	GE27327X012
15	Cap Screw (8 required), Plated steel	GE32059X012		Standard and Token Relief	GE28947X012
16	Nut (8 required), Plated steel	GE32060X012	44	Valve Stem, Aluminum	
17	Union Ring, Aluminum	GE26590X012		Standard Relief	GE27297X012
18	Snap Ring, 302 Stainless steel	T1120637022		Token Relief	GE30895X012
19*	O-ring, Nitrile (NBR)	1K594906562	45	Diaphragm Screw Retainer for Non-Relief, Steel	GE30887X012
20	Stem Guide, Aluminum		47	Adjustable Upper Seat	
	Internal Registration (Open Throat)	GE25384X012		Token Relief, Aluminum	GE33332X012
	External Registration (Closed Throat)	GE25385X012	48	Token Restrictor Plate, Steel	GE28948X012
21*	O-ring, Nitrile (NBR)	12A9480X042	49	Retaining Ring, Steel	GE29720X012
22	Pipe Plug, 3/4 NPT, Steel		50	Pusher Post, Steel	GE27794X012
	Internal Registration	GE34199X012	51	Relief Valve Seat, Aluminum	
23	Screw, External Registration, Steel	1E175828982		Non-Relief	GE27511X012
24*	O-ring, External Registration, Nitrile (NBR)	17A0960X012		Standard and Token Relief	GE26856X012
25	Orifice, Aluminum		52*	O-ring, Nitrile (NBR)	1C782206992
	3/16-inch / 4,8 mm	T1122409012	53	Pusher Post Pin, 18-8 Stainless steel	GE29761X012
	1/4-inch / 6,4 mm	T12522T0012	54	Roller Pin, Brass	GE27060X012
	5/16-inch / 7,9 mm	GE31233X012	55	Diaphragm Head Assembly, Steel/Nitrile (NBR)	GE31248X012
	3/8-inch / 9,5 mm	T1122309012	55A*	Diaphragm	GE31197X012
	1/2-inch / 13 mm	T1122009012	55B	Diaphragm Head	GE28755X012
	5/8-inch / 16 mm	GE31234X012	56	Retaining Ring	GE33772X012
	3/4-inch / 19 mm	T1121909012	57	Slotted Spring Pin	GE33668X012
26	OPP Orifice, 3/4-inch / 4,8 mm		58	E-Ring ( <b>Standard</b> and Token Relief)	GE32969X012
	TM OPP, Aluminum	GE30003X012	60	Closing Cap, Aluminum	GE29244X012
	Type VSX4, Brass	GE28684X012			

\* Recommended spare part.

# CS400 Series

Key	Description	Part Number	Key	Description	Part Number
62*	O-ring, Nitrile (NBR)	T10275X0012	71	Cap Screw, Steel (2 required)	GE32061X012
65	Adjusting Screw, Aluminum	GE27828X012	72	Pipe Plug, 1/4 NPT	
70	Globe Valve Body			Steel	1C333528992
	Gray Cast iron			Stainless steel	1C3335X0012
	NPS 1-1/4, NPT	GE26446X012	73	Sealant	-----
	NPS 1-1/2, NPT	GE26448X012	74	Blanking Plug, Aluminum	GE31255X012
	NPS 2, NPT	GE26459X012	75*	Metric O-ring, Nitrile (NBR)	GF03442X012
	Flange		76	Half Flange, Plated steel	GF01942X012
	NPS 2 / DN 50, CL125 FF	GE26460X012	77*	Metric O-ring, Nitrile (NBR)	GF03442X012
	Ductile Cast Iron		78	Lubricant	-----
	NPS 1-1/4, NPT	GE26465X012	79	Lubricant	-----
	NPS 1-1/2, NPT	GE26466X012	80	Cap Screw, Steel	GE38176X012
	NPS 2, NPT	GE26467X012	90	CSR Nameplate	GE30092X0A2
	NPS 1-1/4, ISO 7/1	GE26469X012	91	Warning Label	
	NPS 1-1/2, ISO 7/1	GE26470X012		CSR	GE32064X012
	NPS 2, ISO 7/1	GE26471X012		<b>Standard</b>	GE32064X022
	NPS 2 / DN 50 CL125 / CL150 FF	GE26480X012		Token	GE32064X032
	NPS 2 / DN 50 PN16	GE26481X012	95	Grommet	GE35358X012
	Steel		100	Seal and Wire (when specified)	T14088T0012
	NPS 1-1/4, NPT	GE26465X022	101	Slotted Spring Pin, Plated steel	GE32724X012
	NPS 1-1/2, NPT	GE26466X022			
	NPS 1-1/4, NPT ISO 7/1	GE26469X022			
	NPS 1-1/2, NPT ISO 7/1	GE26470X022			

\* Recommended spare part.

# CS400 Series

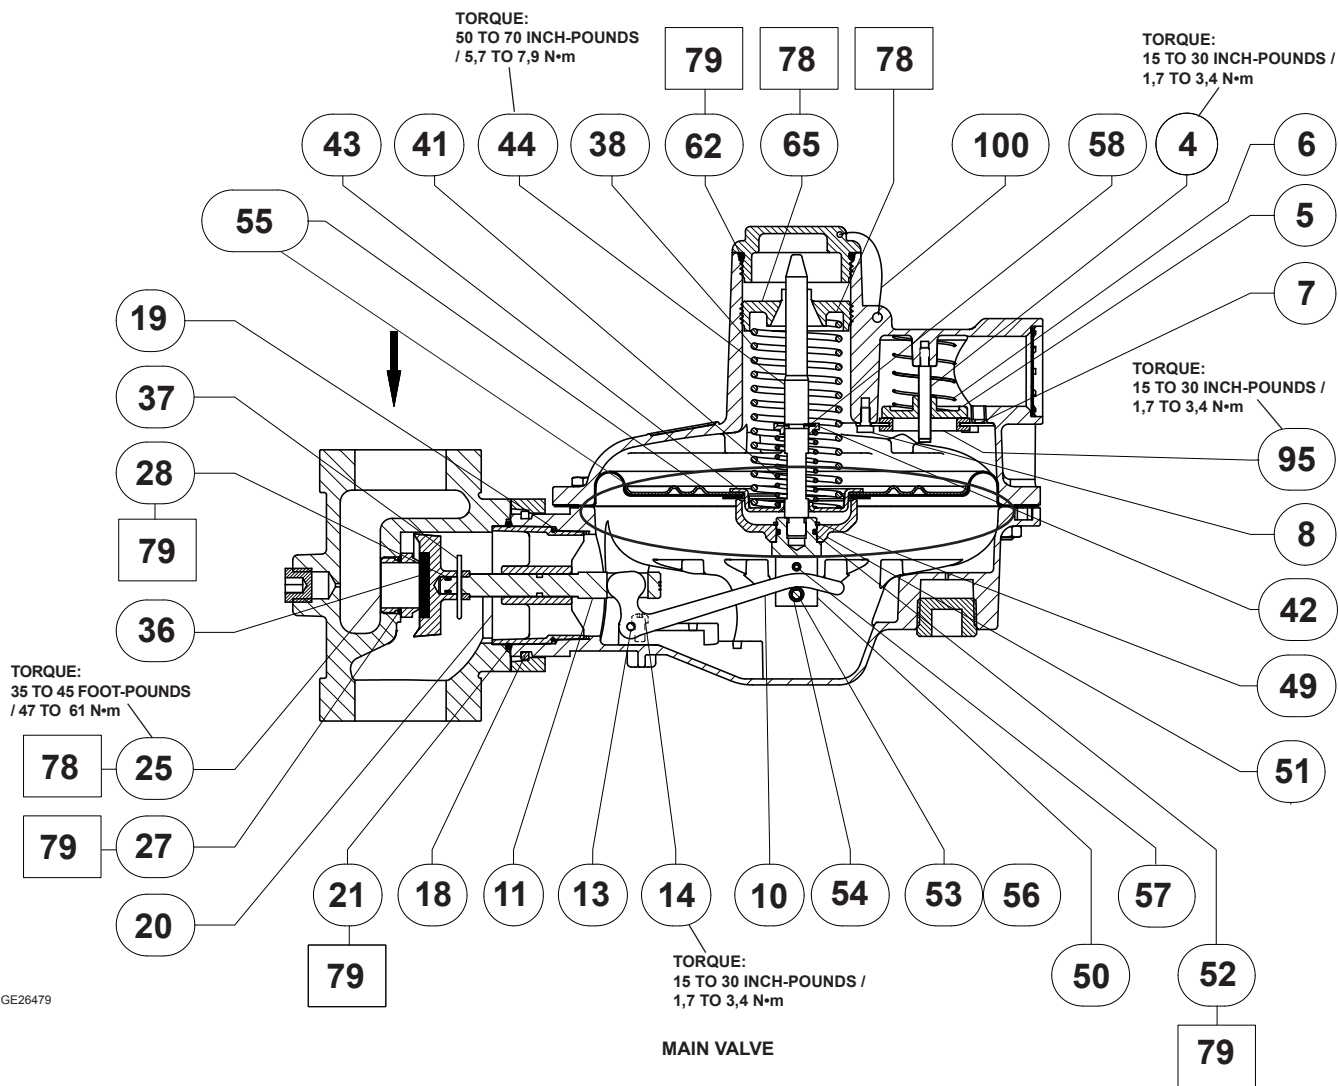


Figure 9. CS400 Series Regulator Assemblies



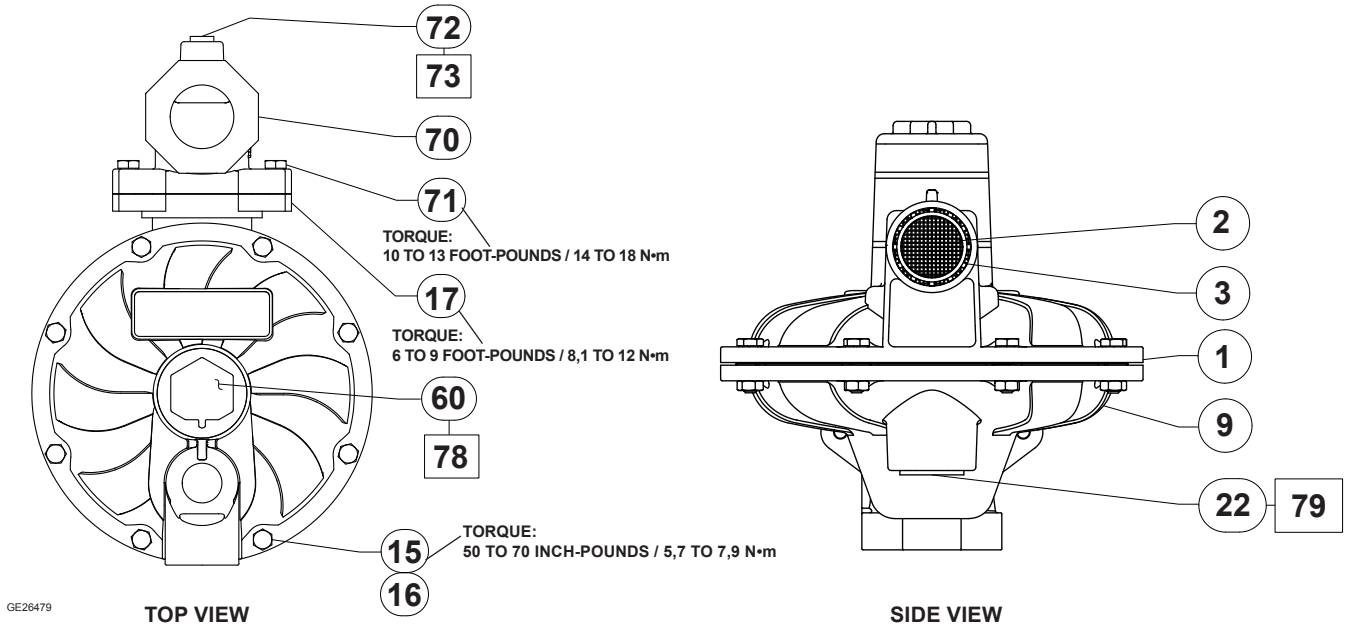


Figure 9. CS400 Series Regulator Assemblies (continued)

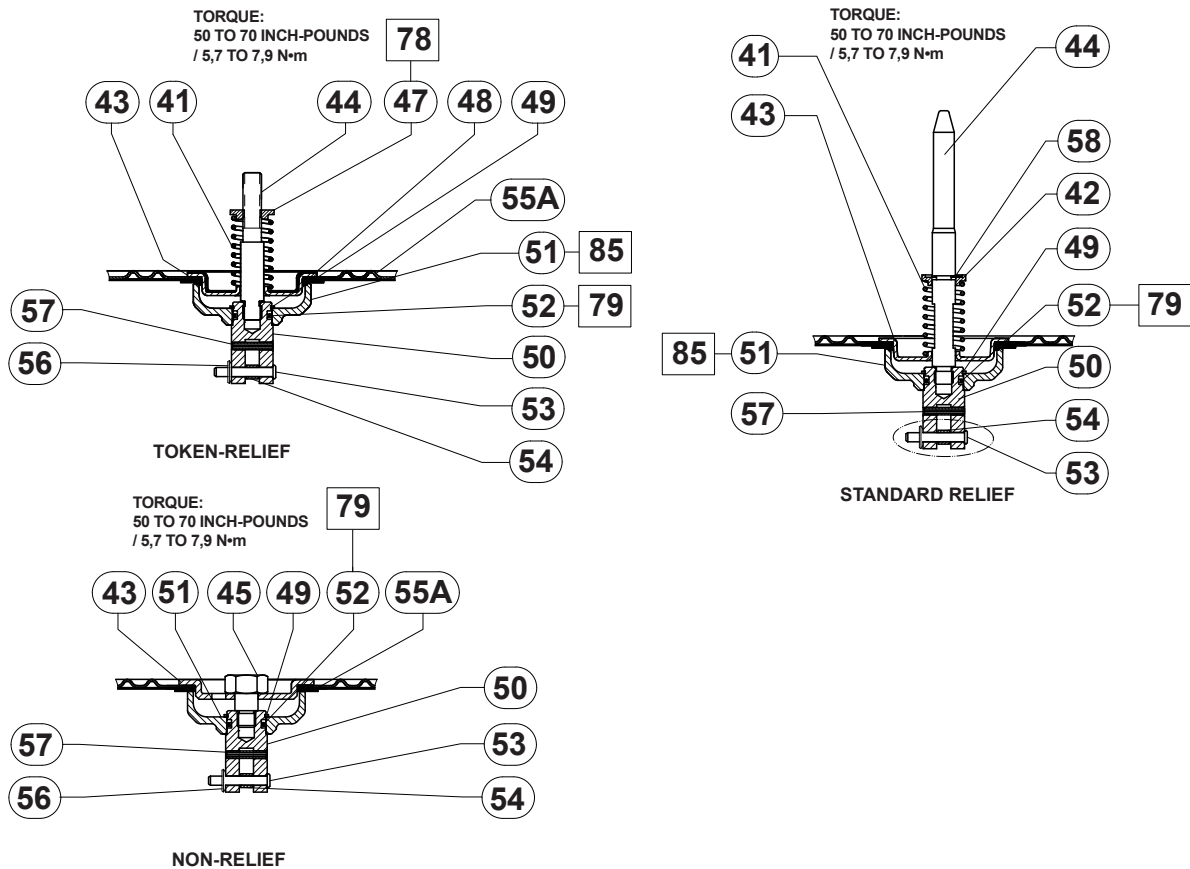



Figure 10. CS400 Series Diaphragm and Stem Assemblies

GE26479

**73** APPLY SEALANT


**78** **79** APPLY LUBRICANT

# CS400 Series

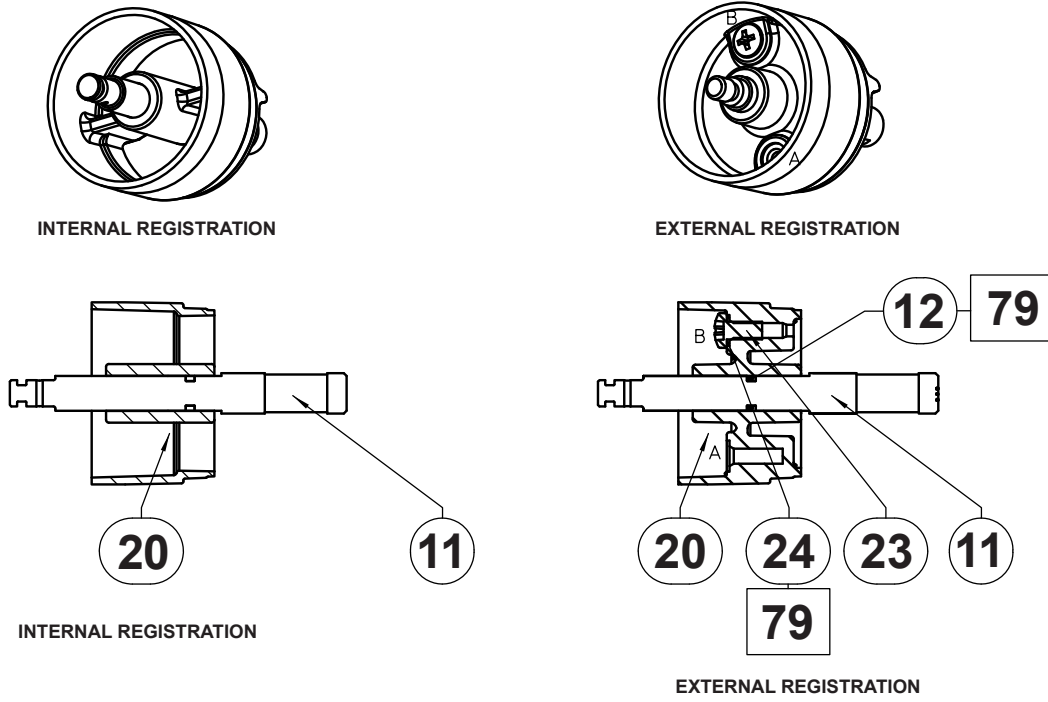

GE26479-A\_S3

Figure 11. CS400 Series Registration Options

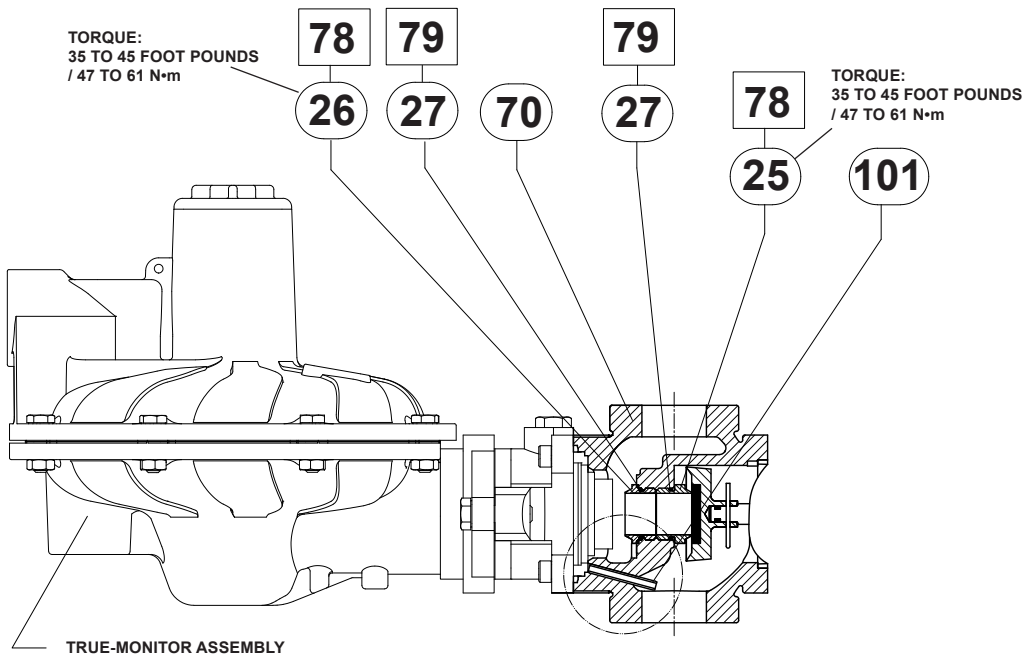

**78** **79** APPLY LUBRICANT/SEALANT

Figure 12. CS400 Series Slam-shut and Integral Monitor Modules


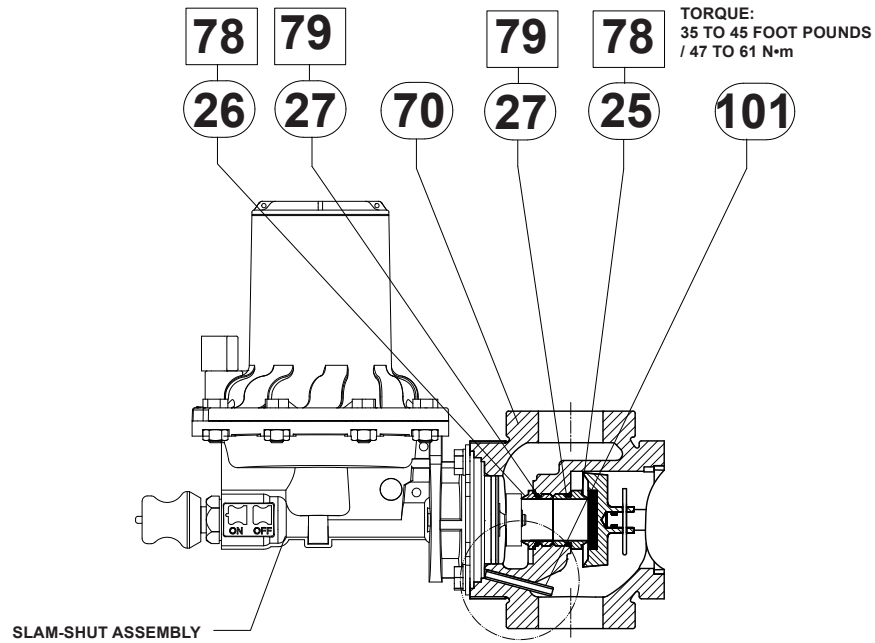


Figure 12. CS400 Series Slam-shut and Integral Monitor Modules (continued)

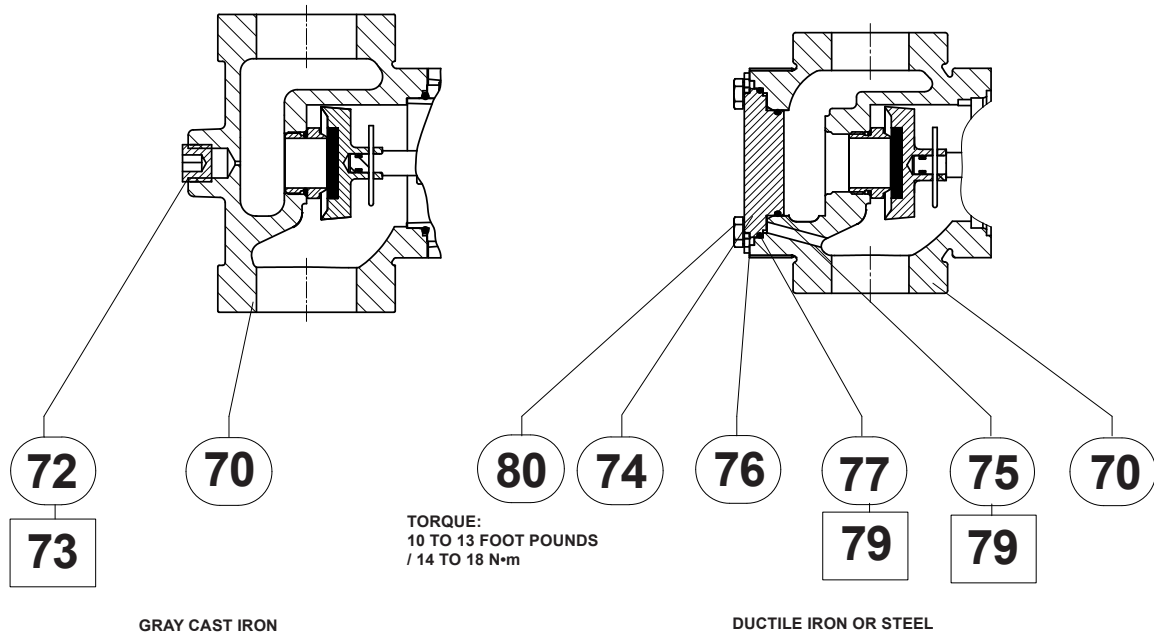

73 SEALANT

78 79 APPLY LUBRICANT/SEALANT

Figure 13. Gray Cast Iron, Ductile Iron, and Steel Body Configurations

# CS400 Series

---

## Industrial Regulators

### Emerson Process Management Regulator Technologies, Inc.

USA - Headquarters  
McKinney, Texas 75069-1872 USA  
Tel: 1-800-558-5853  
Outside U.S. 1-972-548-3574

Asia-Pacific  
Shanghai, China 201206  
Tel: +86 21 2892 9000

Europe  
Bologna, Italy 40013  
Tel: +39 051 4190611

Middle East and Africa  
Dubai, United Arab Emirates  
Tel: +971 4811 8100

For further information visit [www.emersonprocess.com/regulators](http://www.emersonprocess.com/regulators)

## Natural Gas Technologies

### Emerson Process Management Regulator Technologies, Inc.

USA - Headquarters  
McKinney, Texas 75069-1872 USA  
Tel: 1-800-558-5853  
Outside U.S. 1-972-548-3574

Asia-Pacific  
Singapore, Singapore 128461  
Tel: +65 6777 8211

Europe  
Bologna, Italy 40013  
Tel: +39 051 4190611  
Gallardon, France 28320  
Tel: +33 (0)2 37 33 47 00

## TESCOM

### Emerson Process Management Tescom Corporation

USA - Headquarters  
Elk River, Minnesota 55330-2445 USA  
Tel: 1-763-241-3238

Europe  
Selmsdorf, Germany 23923  
Tel: +49 (0) 38823 31 0



The distinctive swirl pattern cast into every actuator casing uniquely identifies the regulator as part of the Fisher® brand Commercial Service Regulator family and assures you of the highest-quality engineering, performance, and support traditionally associated with Fisher, Francel, and Tartarini regulators.

The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their prospective owners. Fisher is a mark owned by Fisher Controls, Inc., a business of Emerson Process Management.

*The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.*

Emerson Process Management does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson Process Management product remains solely with the purchaser.